

# Panasonic Digital Telephone System

Changing the time on a Panasonic digital system can be done from any display phone.

1. Enter programming mode by pressing "PAUSE" then "STAR" button twice, followed by 1, 2, 3, 4
2. Enter program # "000"
3. Press "SPEAKER" button
4. Press "FORWARD/DND" button to change to the hour selection
5. Press "TRANSFER" button and enter the hour
6. Press "FORWARD/DND" button to change to the minutes parameter
7. Press "TRANSFER" button and enter the minutes
8. Press "FORWARD/DND" button to change to the AM/PM parameter
9. Press "MUTE" button to select AM or PM
10. Press "STORE" button
11. Press "HOLD" button
12. Lift and replace handset